 


# Milano

## Air Cooler

### DESTIE 210700800009

### User's Instruction

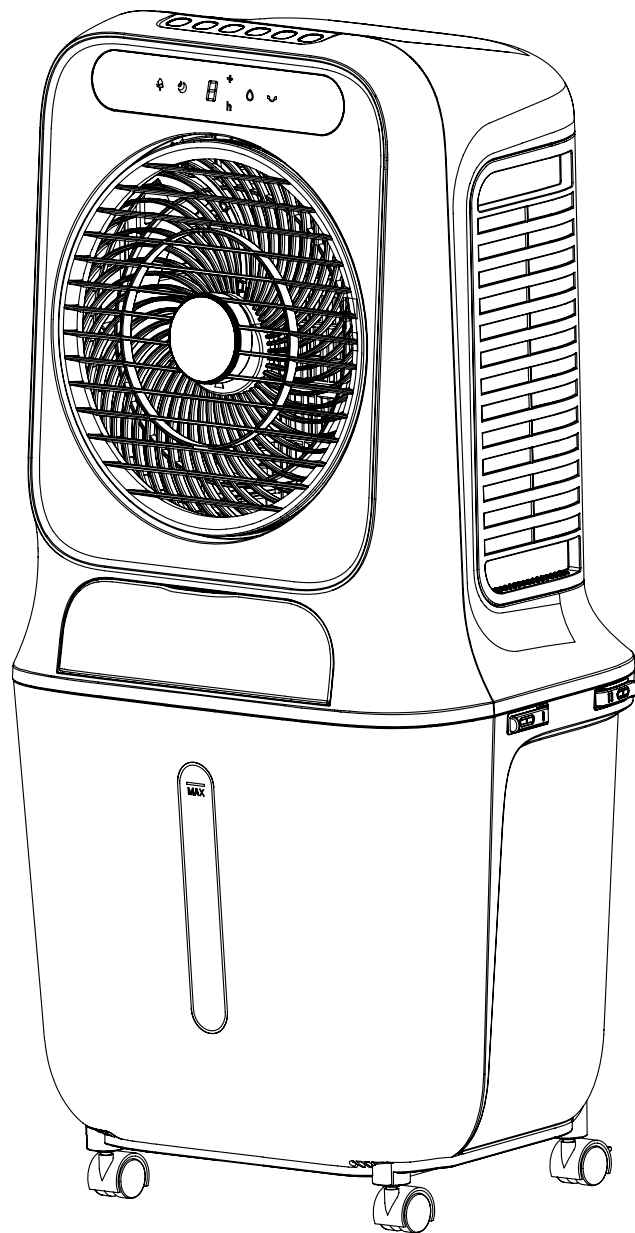



Thank you for your trust and support, and buying our latest multifunctional luxury air cooler.

For your better use of this product, please read the User Guide carefully before use, in order to play the best performance of the device; and keep this User Guide properly for future reference. We hope that our product can give your life convenience and fun.

## CONTENT

I. SAFETY WARNINGS AND PRECAUTIONS.....	4
II. FUNCTIONS.....	6
III. COMPONENTS.....	6
IV. INSTALLATION.....	9
V. CLEANNESS AND MAINTENANCE.....	17
VI.SPECIFICATION.....	18

## I、 Safety Warnings and Precautions

In order to avoid the danger caused by operation errors and to use the machine more conveniently, please read the product instruction manual before use.

1. The appliance is only for household and indoor use.
2. When using this machine, you must use a qualified power outlet that has been checked and met the requirements. Please confirm the voltage used when relocating.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Unplug the appliance during filling and cleaning.
7. Do not touch the power cord plug with wet hands, there is a danger of electric shock.
8. When unplugging the power cord, do not pull the wire.
9. Do not fold or place heavy objects on the power cord.
10. It is strictly forbidden to insert foreign objects such as wooden sticks and metal sticks into the air inlet and outlet, which will cause leakage, short circuit and the possibility of product damage.
11. Do not spray pesticides and flammable sprays around the product, which may damage the product.
12. Avoid blowing the product air outlet directly to children for a long time, which may cause children to get sick or affect their health.
13. When using, make sure that the plug of the power cord is free of foreign objects, and insert the plug completely.
14. Abnormal handling. When the product has peculiar smell and abnormal sound during use, please stop using it immediately and unplug the power supply.
15. After adding water to the machine, do not tilt or collide when placing or moving it to prevent splashing. If the product has been dumped and there

is water in the machine, unplug it immediately and wait for 24 hours to dry before turning it on.

 
16. The water level of the water tank should not exceed the maximum water level line.
17. When the water tank of the product is full of water, do not grab the handle to lift the whole machine, otherwise the water in the water tank will overflow, you can only push the handle to move the product, and only when it is confirmed that there is no water or very little water in the water tank, you can grab the handle to move the product. Lift the whole machine.
18. When humidifying, it is strictly forbidden to disassemble and assemble the air filter net and the wet curtain bracket, which will cause water droplets to spray out of the air outlet.
19. When going out or not using the machine for a long time, you must turn off the machine and pull out the power cord plug from the socket.
20. If the product fails, please send it to the repair station or notify the after-sales service center, and do not disassemble or replace the parts without authorization. Arbitrary disassembly and modification will affect the safety of the product.
21. **WARNING: Chemical Burn Hazard. Keep batteries away from children.**
22. Do not ingest battery, Chemical Burn Hazard.
23. This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours.
24. If the battery compartment does not close securely, stop using the product and keep it away from children.
25. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
26. The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and that they are disposed of safely.
27. Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
28. Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
29. Never leave water in the reservoir when the appliance is not in use.
30. Empty and clean the humidifier before storage. Clean the humidifier before next use.

## II. FUNCTIONS

1. Cooling/humidification function
2. Timing function: timing is 1-9H
3. Remote control function (infrared distance maximum: 6 meters, control range:60°);
4. Dry air function
5. Water shortage alarm function (the indicator light flashes, no alarm sound);
6. Wind speed: high, medium, low
7. Wind mode: normal /natural/sleep wind
8. Button control panel
9. Wind direction: the swing blade rotates 360° to supply air
10. Universal wheel design: (with brake), easy to move
11. In plug in state, when you turn off the machine, then turn on again, it would have smart memory function, which is back to your setting before.
12. Removable water tank for easy storage
13. With Plasma function


## III. COMPONENT

### ● Structure

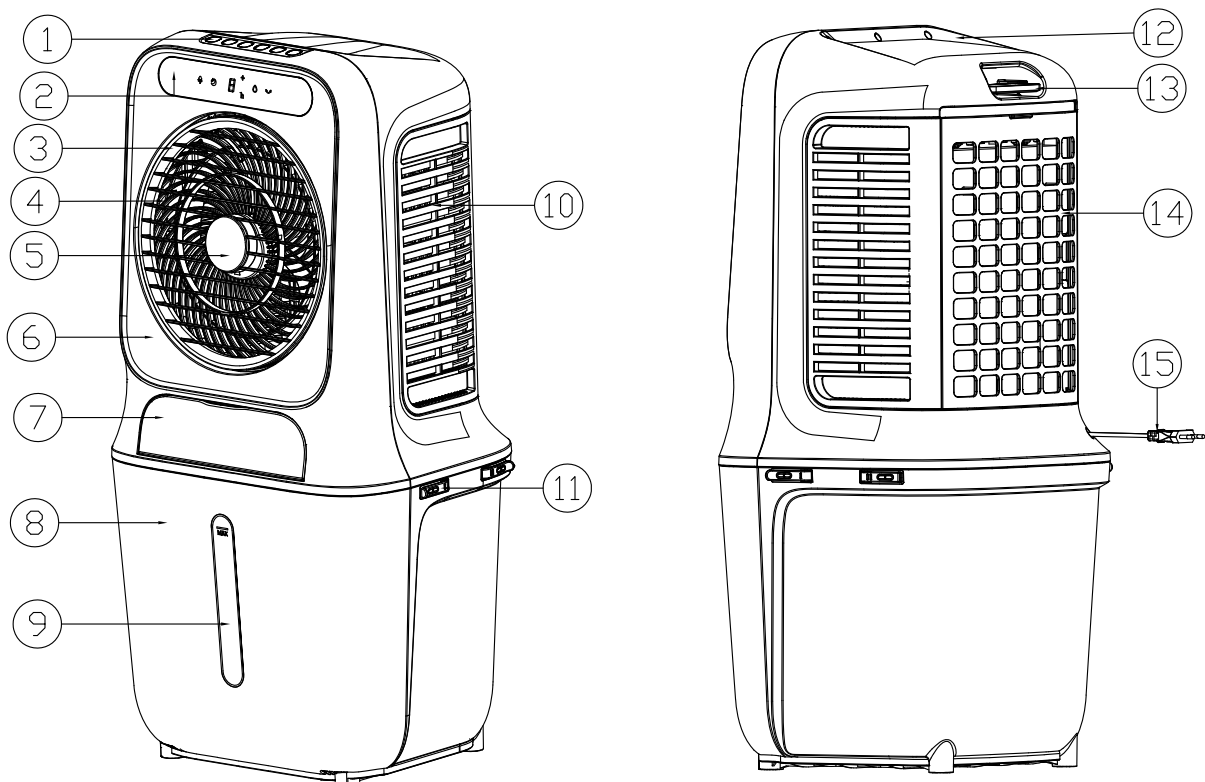

- |                      |                               |                   |
|----------------------|-------------------------------|-------------------|
| 1. Button            | 2. Display panel              | 3. Rotating blade |
| 4. Air outlet grill  | 5. Front cover                | 6. Front shell    |
| 7. Inlet gate        | 8. Water tank                 | 9. Water gauge    |
| 10. Honeycomb filter | 11. Water tank fasten bracket | 12. Back shell    |
| 13. Remote control   | 14. Back filter               | 15. Power cord    |



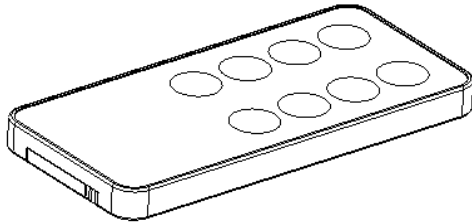 



**Affix**



 
Remote control

- The following picture is operation panel diagram. It is express in English here. When delivered, the function should be described in official language of the importing country.




- |                       |                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------|
| 1. ON/OFF             |  |
| 2. Speed (Hi/Mid/Low) |  |
| 3. Timer (1H-9H)      |  |
| 4. Mode               |  |
| 5. Cooler/Humidifier  |  |
| 6. Swing              |  |


- Diagram for operation panel

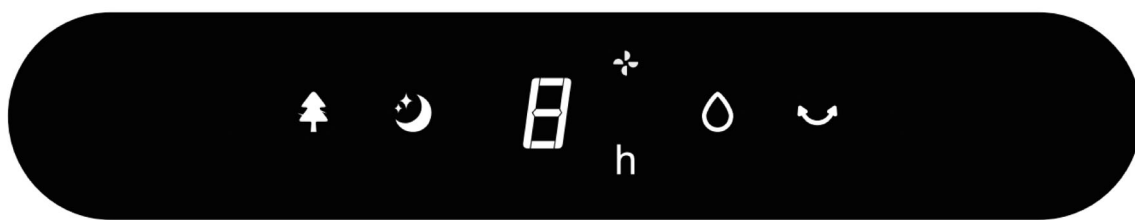

- Diagram for operation panel of remote control shall be subject to words in the language of the country

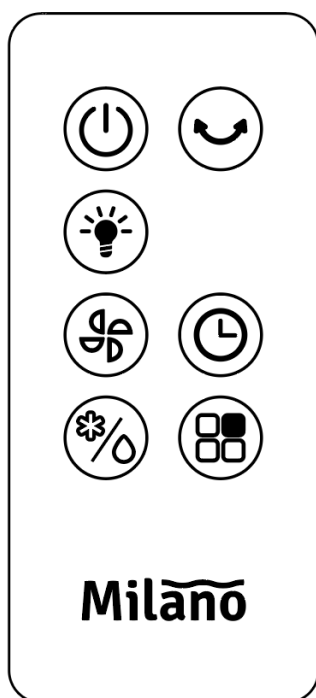 

- Affix : Ice pack

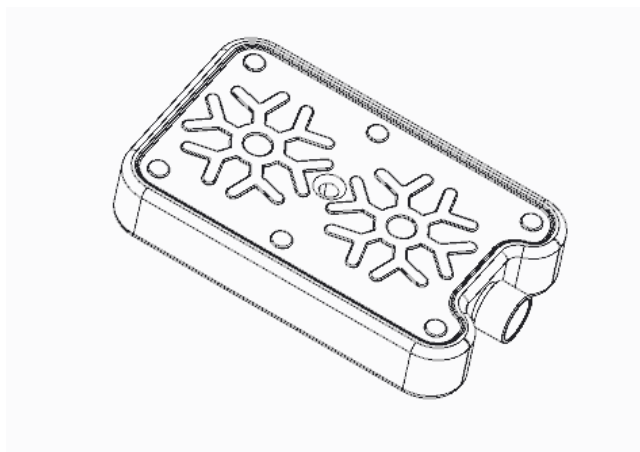 



- Usage of ice packs:

Ice packs have a cold storage and heat preservation characteristics, which can absorb the heat in the water, keep the water temperature in the water tank lower than the ambient temperature for several hours, and make the wind from the air cooling fan cooler.

1. Put the ice pack into the refrigerator until it freezes completely.
2. Put the frozen ice pack into the water tank. After about 10 minutes, the water temperature in the water tank will be lower than the ambient temperature.
3. The appliance is equipped with two ice packs to ensure continuous use.
4. Do not open the cover of the ice box or swallow its contents.

#### IV. Product installation and usage

 

- Usage of ice pack:

After the product is unpacked, install the casters. According to the prompts on the water box, take out the water pump and assemble the body with the water tank. After four fixing buckles are fastened, it can be used directly.






- Usage of various function buttons

After plugging in the power supply, it enters the standby state, and all the function indicators are off. Except for the ON/OFF, pressing other keys is invalid.


1. “” ON/OFF

- 1) In the standby state after power-on, press the “ON/OFF”  once to turn on the power. The default state of power-on is:
  - a) Fan: low-speed wind operation, the wind speed indicator light is on, and the digital tube displays "1". (After powering on for the first time, start the mid-range wind for 3 seconds, then switch to the low-speed wind, and then turn it on in the standby state. If low-speed wind was used before shutting down, run the mid-range wind for 3 seconds, and then switch to the low-speed wind.)
  - b) Other functions are turned off, and the corresponding indicator lights are off.
- 2) In the working state, pressing the "ON/OFF"  will turn off all functions and the machine will enter the standby state.

## 2. “” Wind speed

- 1) In the power-on state, press the “” button to adjust the wind speed. According to: low-speed wind → mid-speed wind → high-speed wind → low-speed wind... cycle, digital tube instructions: press "1" → "2" → "3" → "1"... to cycle in turn.
- 2) Dry air function:
  - a) In the power-on state, press and hold the “” button for 3s to enter the dry air function, start the high-speed wind, the wind speed indicator flashes, and continue to run for 20 minutes;
  - b) During the operation of the dry air function, except for the “” on/off button and the “” screen-off button, other function buttons are invalid. (Long press the “” button for 3s to exit the dry air function)
  - c) After the high-speed wind runs for 20 minutes, the machine will automatically shut down and enter the standby state.

## 3. “” Timer

- 1) In the power-on state, press the “” timer button to set the timer shutdown function.
- 2) The time range of timing is 0-9 hours, which is progressive in hours and displayed by digital tube. ("0" means no timing)
- 3) In the power-on state, press this key, the time indicator lights up, and the digital tube flashes to display the timed time, indicating that it is in the state of timed time setting. At this time, you can press the timed button to set the timed time, press any key (except the on/off button) or wait 5 seconds to exit settings. After the timing is completed, the digital tube displays the timing time and the current wind speed alternately at 10-second intervals, and the wind speed indicator and the time indicator display accordingly. When the internal timing program expires, the machine will shut down and be in a standby state.

#### 4. “” Mode

When it is turned on for the first time, it is running with normal wind. Press the "

 


" mode wind button to switch the mode wind. The switching sequence is: normal wind→natural wind→sleep wind→normal wind..., and the corresponding indicator lights show its function.

**Normal wind:** The product operates according to the wind speed gear set by the user, divided into three wind speed gears: high, medium and low, and runs at a fixed speed.

**Natural wind:** The product operates according to the wind speed gear set by the user, according to the rules preset by the program, and the operation mode is automatically switched from high-medium-low gear. This mode imitates the blowing effect of nature, making the blowing wind more Soft and comfortable.

The specific program waveform of natural wind mode is as follows:

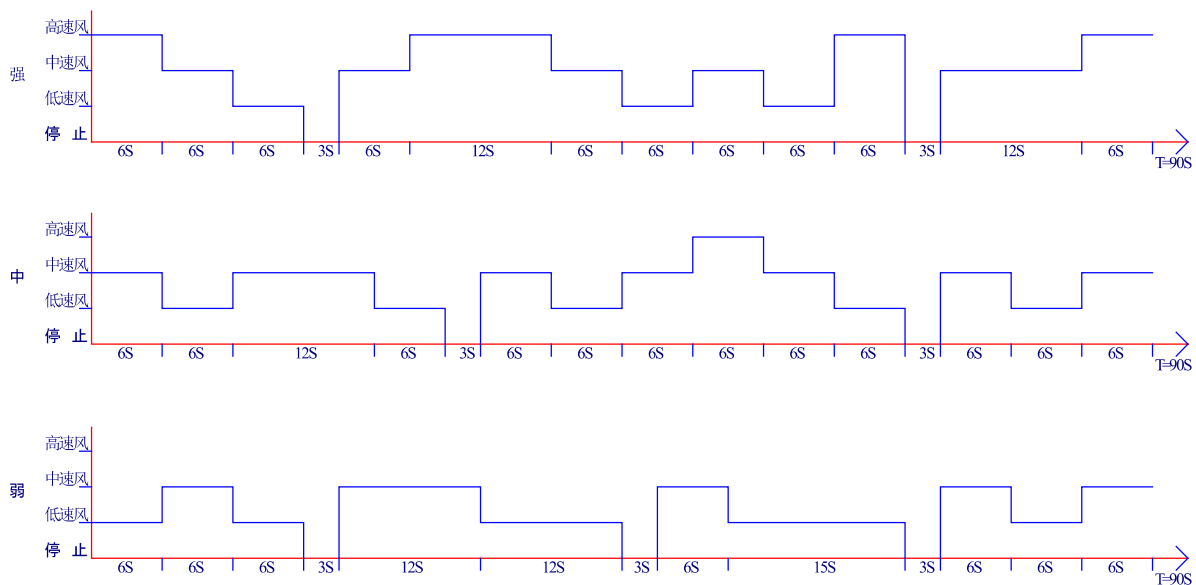

**Sleeping wind:** The product performs timed downshifting according to the wind speed gear set by the user and according to the rules preset by the program. This mode prevents people from falling asleep due to too much wind and causing physical discomfort; the following is the set gear and sleep wind. Operation after opening.

**High-speed sleep wind:** 30 minutes high-grade normal wind → 30 minutes mid-range normal wind → low-grade normal wind has been running


**Medium-speed sleep wind:** 30 minutes, mid-range normal wind → low-speed normal wind has been running

**Low-speed sleep wind:** low-speed normal wind has been running.

In the sleep wind mode, the wind speed indicator of the corresponding gear changes with the switching of the normal wind mode. (For example: when the sleep wind is turned on at the mid-range wind speed, the mid-range normal wind

will automatically switch to the low-grade normal wind after running for 30 minutes. At this time, the digital tube display will automatically switch from "2" to "1".)

## 5. “” Cooler/Humidifier

- 1) In the power-on state, press the “” cooler/humidifier button to turn on or off the cooling/humidifying function:  
The cooling/humidification function is turned on: the water pump is working, and the indicator light is on.  
The cooling/humidification function is off: the water pump stops working and the indicator light does not light up.
- 2) Water shortage protection function: When the cooling function is turned on, after the pump works for 45 seconds, if the water tank is continuously detected to be short of water within 5 seconds, and the protection switch is disconnected (water shortage), the water pump will stop working, and the indicator light will be on for 0.5 seconds and off for 0.5 seconds. The frequency of seconds keeps flashing, and the humidification function is turned off. Press the cooling/humidifying key again to turn off the indicator.


## 6. “” Swing


In the power-on state, press the “” swing button to enable or disable the swing function:

Open the swing wind: the swing wind ring is working, and the indicator light is on.

Swing wind off: The swing wind ring stops working, and the indicator light does not light up.

## 7. “”: (This button is on the remote control)


In the power-on working state, press the “” off-screen button on the remote control, the machine enters the off-screen function, and all indicators are off.

When the machine is in the off-screen state, press the “” off-screen button or any button for the first time, the indicator light will return to the steady state, and the function will not be switched, and then press other buttons to execute the corresponding button function.

## 8. Other Function

- 1) Within 1 minute after any indicator light is on, if there is no action on the button at this time, the indicator light will be dimmed (1/3 of the

original brightness). At this time, the button will be activated again, and the indicator light will be bright.

- 2) Uninterruptible power memory function: If it is not turned on for the first time, press the “” on/off button in the standby state, and it will keep the state before shutdown after starting, except for the timer, sleep air and dry air functions.

### Refilling water

If you need to turn on the refrigeration and humidification function, please add water to the water tank.

The way to add water to this machine:

1. Before adding water, open the water inlet gate and slowly pour water into the water tank  
(Figure 1 and Figure 2): After adding the water, close the water gate again.

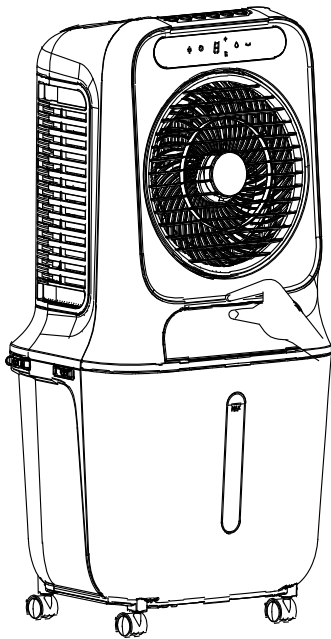 


Figure 1

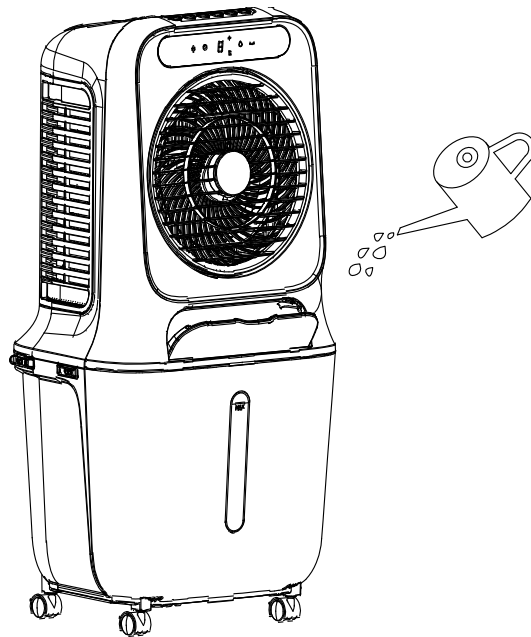 


Figure 2

2. Before adding water, open the 4 water tank buckles to separate the body from the water tank, and slowly pour water into the water tank (Figure 3 and Figure 4): After adding water, install the body and water tank, and fix the buckle.

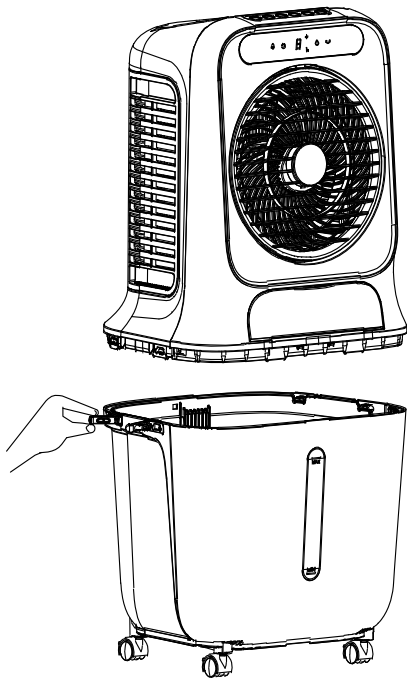 


Figure 3

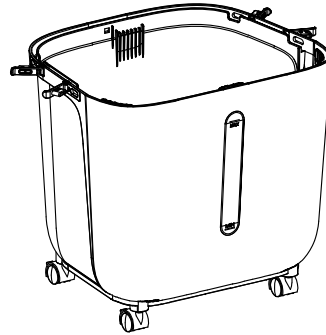 
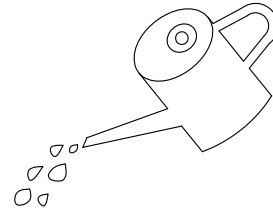 


Figure 4


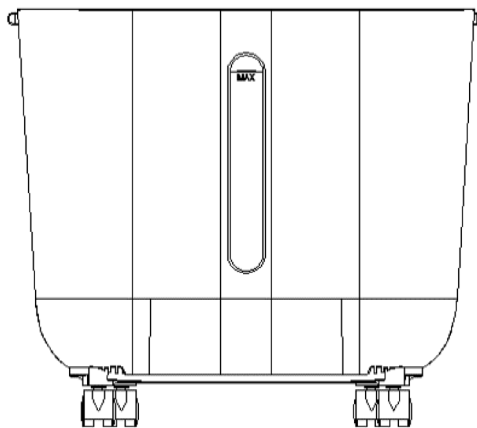 


Figure 5

3. When adding water, please pay attention to the water level display on the front of the water tank. (Figure 5)
  - 1) When adding water, please be careful not to exceed the maximum water level.
  - 2) Be sure to use clean tap water.
  - 3) Warm reminder: When the machine is used for the first time, if the water in the water tank has a slight discoloration and a slight smell, it is a normal phenomenon, non-toxic and harmless, and will not affect your health.

 - Usage of the water pump:

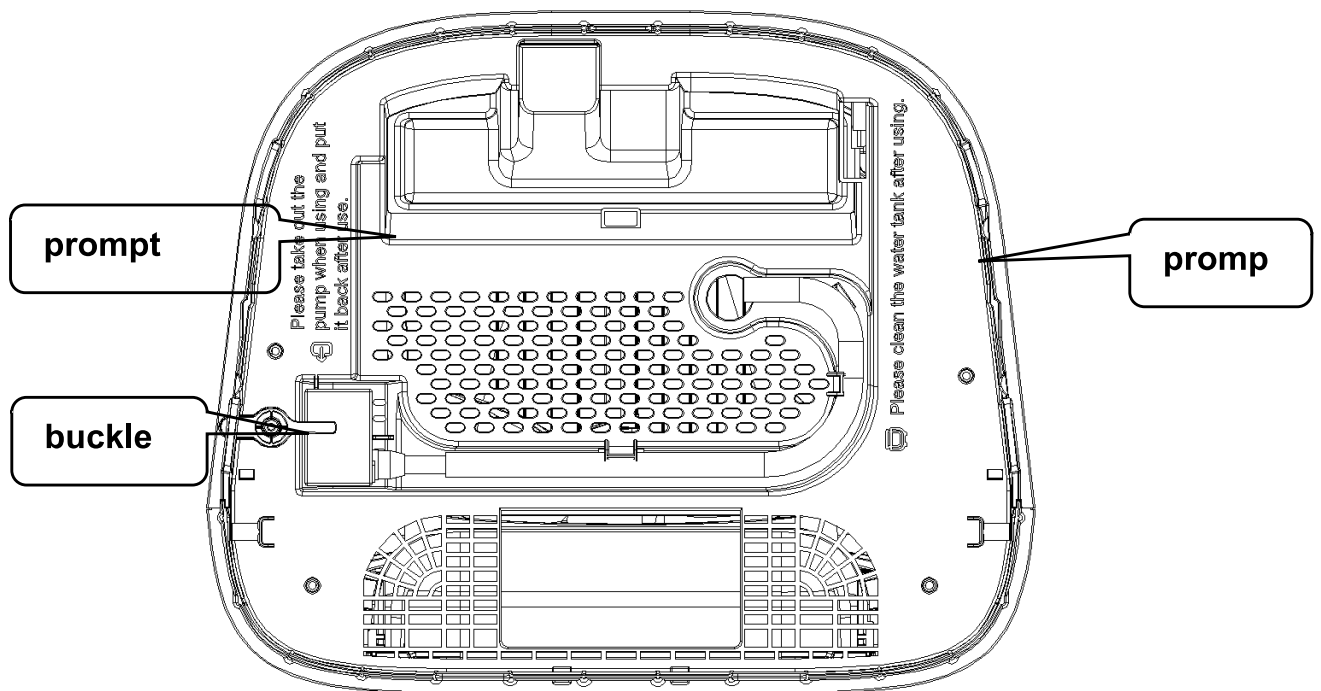

1. After taking out the fuselage, please pay attention to check the bottom prompt (Figure 6, Figure 7).


Please take out the  
 pump when using and put  
 it back after use.

Figure 6

 Please clean the water tank after using.


Figure 7

 2. Rotate the water pump buckle counterclockwise, and take out the water pump and water pipe from the storage tank (the water pipe is fixed by two buckles), so that the water pump can naturally drop to the bottom of the water.

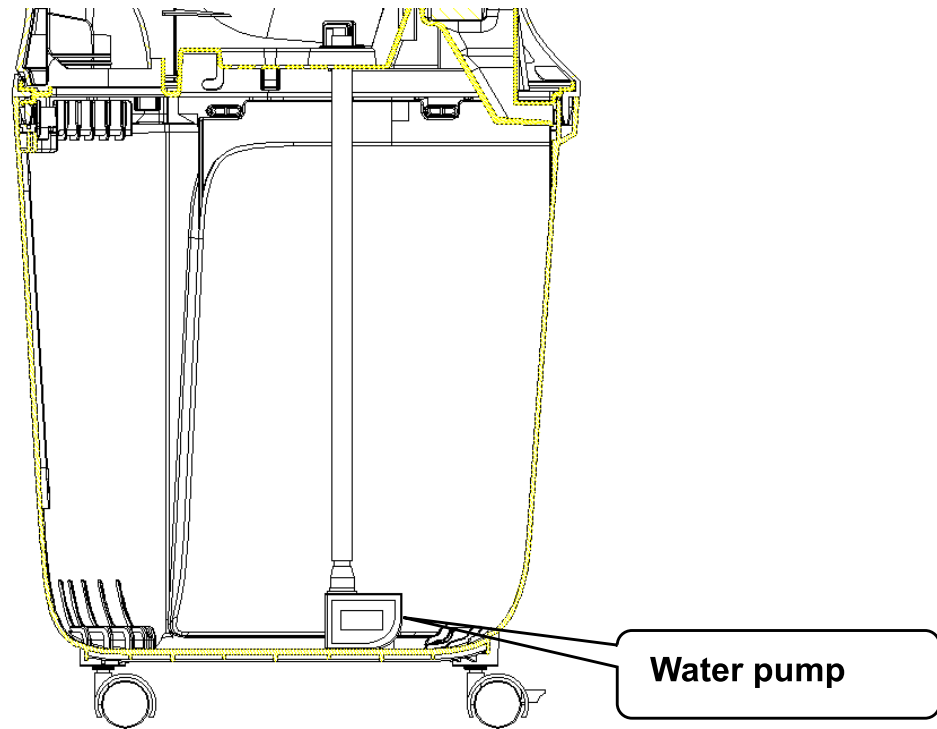

- Usage of the remote control:

 1. First open the battery cover on the back of the remote control, install a 3V CR2032 battery, and it can be used.
  - How to open the battery cover: First press and hold in the direction of arrow 1 in the figure to release the button on the battery cover, and then pull out in the direction of arrow 2.
2. When using, please align the position of the receiving head.
3. When the power of the battery is exhausted, pull out the battery cover according to the direction shown in the figure, and replace with a new battery (CR2032 3V). When replacing the battery, please pay attention to the positive and negative poles of the battery; then the battery cover is reset and ready for use.
4. The cells shall be disposed of properly, including keeping them away from children;
5. Even used cells may cause harm.

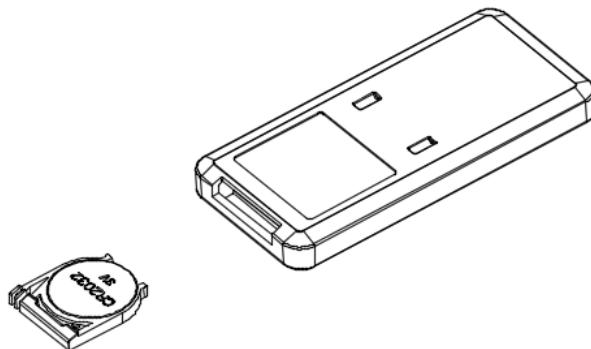



## V. Cleanness and Maintenance

### ● Reminder



Don't use chemicals during cleaning.

- Turn off the power and unplug the power plug.



Please be sure to unplug the power line during cleaning, otherwise it may cause electric shock.

- When the outer surface is dusty, wipe it with a soft cloth; when the surface is too dirty, it can be mixed with water below 50 degrees Celsius and a neutral detergent, then wiped with a soft cloth and dried.

- When cleaning, do not use gasoline, thinner, thinner and any substances that can easily damage the outer surface

### ● Water Tank cleaning

1. Unplug the power supply, turn the bobbin lock knob to the horizontal direction, and pull out the water tank.
2. Wipe off the scale in the water tank with a towel dipped in a little detergent, then rinse with water and then pour out the sewage.

### ● Body surface cleaning

1. To clean the surface of the body, just wipe it with a damp cloth. It is strictly forbidden to directly rinse it with water.
2. Do not use corrosive detergents or solvents for cleaning.
3. Be sure to turn off the power switch and unplug the power cord when cleaning the body, otherwise there may be electric shock.

### ● Install and use after cleaning

1. Install the cooling pad assembly, water tank, etc. in order to ensure that the installation is correct.
2. Connect the power supply to confirm that the product is working properly.

### ● Maintenance

1. When the product is not used for a long time, unplug the power plug, pack the product and prevent dust from entering the body.
2. Before packaging, make sure that the cooling pad, filter, etc. are dry, and there is no water in the water tank.

## VI. Specification

Product Model	DESTIE 210700800009
Rated voltage	220-240V~
Rated frequency	50Hz
Rated power	90W
Noise(High speed)	≤58dB
Rated output air volume	1500m <sup>3</sup> /h
Rated evaporation	850mL/h
Energy efficiency ratio	5.1W/W
Product size	L418mm×W333mm×H840mm
Net weight	7.1±0.5Kg
Packing weight	10.5±0.5Kg(included the weight of the two ice packs)
Applicable environment	Relatively humidity less than 95% (25℃)

### Environmental Protection



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



